

# T·TOP INSTRUCTIONS

## UNIVERSAL ALU T-TOP

- > Made in alu powder white coating pipe Ø 32mm.
- > T-TOP fabric made in waterproof polyester
- > UV resistant
- > Max speed resistance: 25 knots




Art. O2902120

← cm.	↙ cm.	↘ cm.	↑ max cm.
170	120	85	205


Art. O2902140

← cm.	↙ cm.	↘ cm.	↑ max cm.
170	140	105	205

## COMPONENTS IN THE BOX

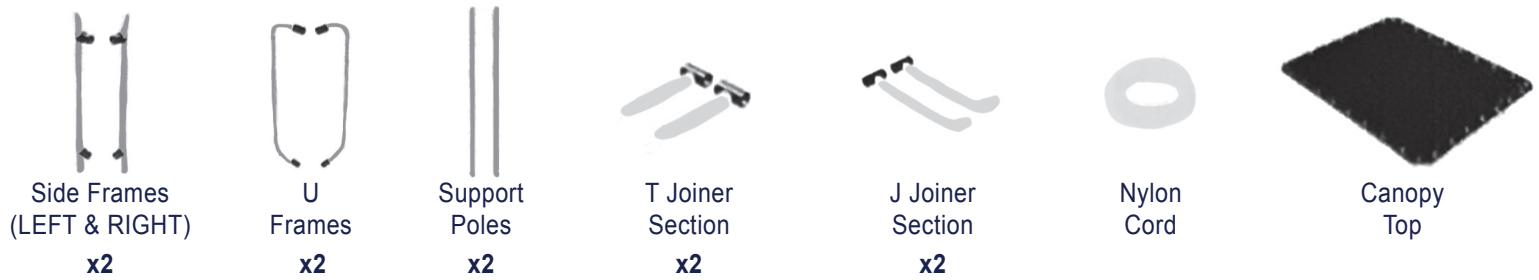

## BASE SECTION COMPONENTS

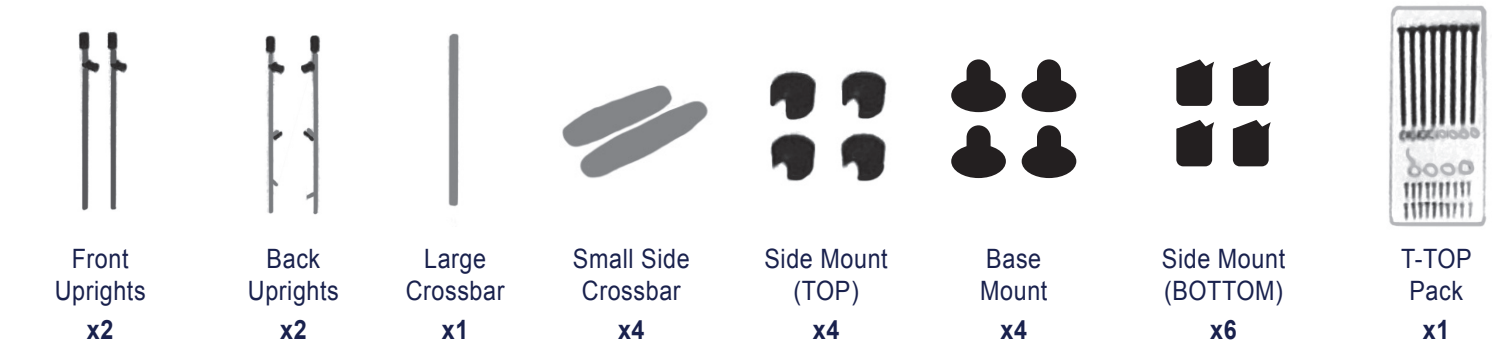

## ASSEMBLY INSTRUCTIONS

### 1. ASSEMBLING THE CANOPY SECTIONS



**1** Slide the **T and J joiners** onto separate support poles, spacing the joiners evenly as shown.





**2** Insert side frames into the **support poles**. The support pole housing the T joiners should be closest to the side frame bend.



**3** Insert the **U frames** onto the ends of both **side frames**.



**4** Drill and fasten the **Canopy Section** frame at the points indicated, using the illustrations as a guide.

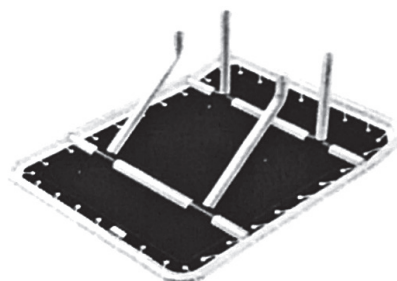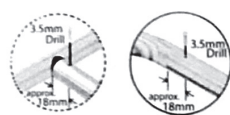

**5** Lay out the **Canopy Fabric** topside down and place the inverted frame over it. Lace **nylon cord** through the eyelets and frames. Ensure it's evenly threaded and tight.



# T·TOP INSTRUCTIONS

## ASSEMBLY INSTRUCTIONS

### 2. ASSEMBLING THE BASE SECTION

#### UNIVERSAL ALU T-TOP

- > Made in alu powder white coating pipe  
Ø 32mm.
- > T-TOP fabric made in waterproof polyester
- > UV resistant
- > Max speed resistance:  
25 knots




Art. O2902120

← cm.	↙ cm.	↘ cm.	↑ max cm.
170	120	85	205

Art. O2902140

← cm.	↙ cm.	↘ cm.	↑ max cm.
170	140	105	205

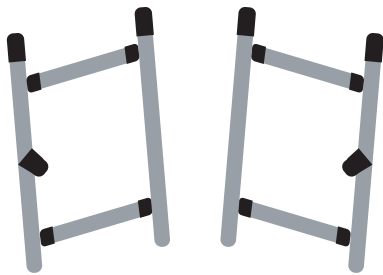

**1**  
Join the **Front** and **Back Uprights** using the **Small Side Crossbar** to form two **H Frames**.




**2**  
Connect the two **H Frames** using the **Large Cross Bar**. The connector must be cut to the width of your console + 95 mm.




**3**  
Attach the **Base Mounts** to the frame.

## ASSEMBLY INSTRUCTIONS


### 3. MOUNTING THE BASE SECTION

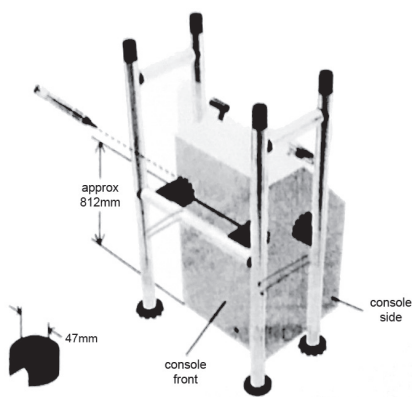

**1**  
Mark the locations where you will fit the mounts on the front of your console (placing them as far apart as possible). Mark the console **side mounts** position (as high as possible)

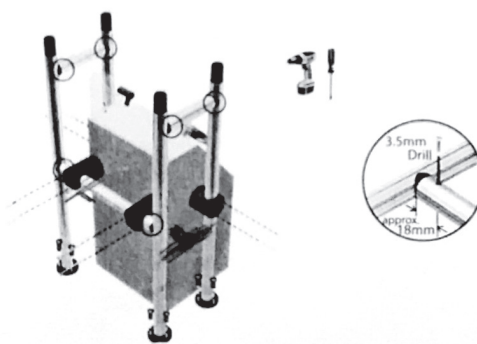

**2**  
Mark and drill positions for all **side mounts**. Attach mounts loosely, using 1/4" screws (supplied) to hold frame in place while fastening **base mounts** into position. Drill through base mounts to secure **Base Section** to boat floor (screws not supplied). To finish assembly of **Base Section** tighten all **side mounts** and secure **crossbars** using self tapping screws (supplied) - as shown in the diagram.

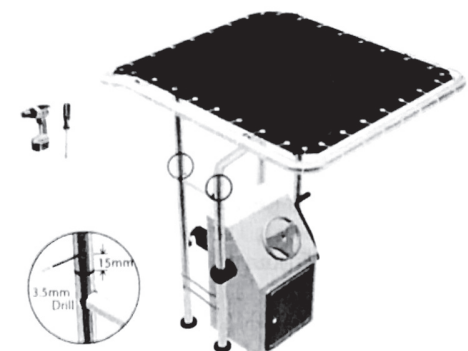

**3**  
Attach the Canopy Section to the Base Section. Secure permanently using self tapping screws (supplied) - as shown in the diagram.